Use With: OM-03989 MR-03991



PUMP MODEL RS2A32—BAR

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RS SERIES PUMP PL—03990

PERFORMANCE CURVE - SECTION A

RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.

PERFORMANCE CURVES

The performance curves on the following page are based on 70° F (21° C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PAGE A — 1 PART LIST MANUAL

PL-03990 RS SERIES PUMP

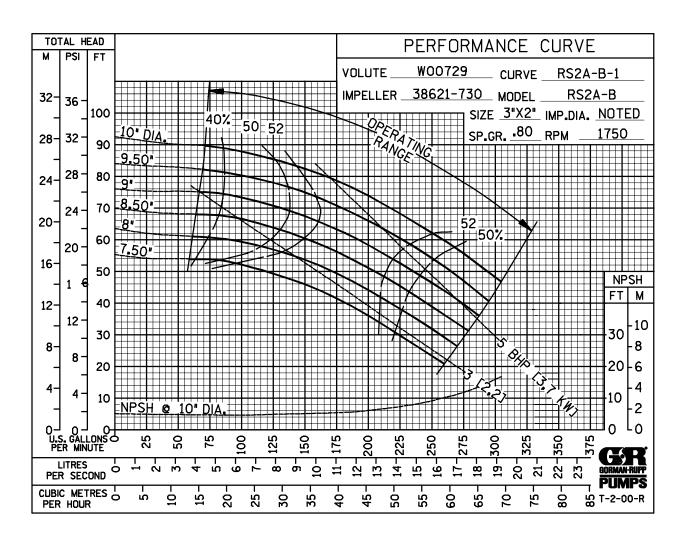

PERFORMANCE CURVE - MODEL RS2A32-BAR

PARTS LIST MANUAL PAGE A – 2


RS SERIES PUMP PL-03990


This Page Intentionally Blank

PAGE A – 3 PART LIST MANUAL

В RS2A32-BAR

S/N 1270031 Up PUMP ISSUE 3

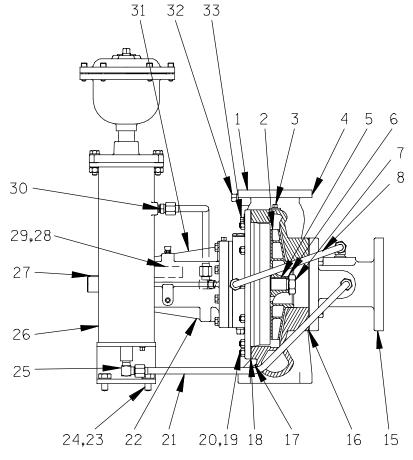

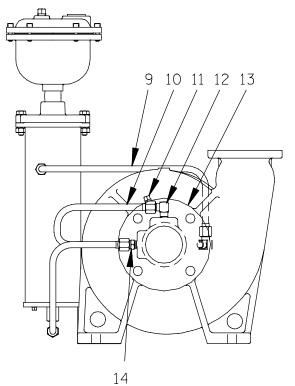

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Printed in U.S.A.

S/N 1270031 Up PUMP ISSUE 3

PARTS LIST Pump Model RS2A32—BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM PART NAME PART MAT'L QT NO. NUMBER CODE	Υ
1 2 * 3 4 5 * 6 7 * 8 9 10 11 12	PIPE PLUG DISCHARGE STICKER IMPELLER KEY LOCKWASHER	W0729 38621-730 P02 6588BJ K79328-23 23962-506 K75775 B1007 46335-057 46335-055 P02 25812-011	10140 13048 15079 15990 15111 15991 15079	1 1 1 1 1 1 1 4 1 1 1	22 BRG HOUSING ASSY 44143−112 −−− 23 HEX HD CAPSCREW B0805 15991 24 LOCKWASHER J08 15991 25 90° MALE ELBOW 25812−011 −−− 26 AIR RELEASE VALVE GRP33−06B −−− 27 ** SHAFT KEY N0406 15990 28 NAME PLATE 2613DZ 13990 29 DRIVE SCREW BM#04−03 15990 30 CONNECTOR 25812−214 −−− 31 LUBE DECAL 38816−081 −−− 32 PIPE PLUG P06 15079 33 PIPE PLUG P06 15079 NOT SHOWN:	1 2 2 1 1 1 1 2 1 1 1
13 14 15 16 * 17 18 * 19 20 21	PIPE PLUG	6588AG 25812-214 10845B 38681-818 P02 R08108 C0606 D06 46335-056	10140 19370 15079 20000 15991 15991	1 1 1 1 1 1 12 12	* SUCTION FLANGE GSKT 11589GA 18000 * DISCH FLANGE GASKET N14226 18000 INSTRUCTION TAG 38817-011 BEARING TAG 6588ABB ROTATION DECAL 2613M OPTIONAL: COMPANION FLANGES (SUCT AND DISCHARGE) -COMPANION FLG KIT K33849 STEEL TUBING KIT 48263-506	1 1 1 1 1


^{*} INDICATES PARTS RECOMMENDED FOR STOCK

[†] ALL ROTO-PRIME™ IMPELLERS ARE TRIMMED.

[•] SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.

В RS2A32-BAR

> S/N 1270031 Up PUMP ISSUE 3

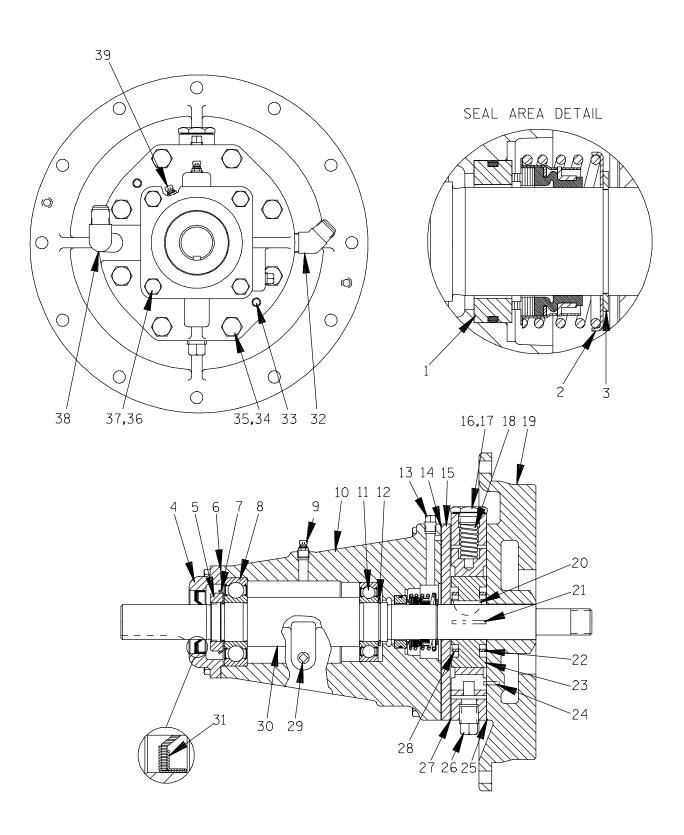

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

Printed in U.S.A.

RS2A32-BAR

S/N 1270031 Up PUMP ISSUE 3

PARTS LIST 44143-112 Bearing Housing Assembly


ITEM PART NAME NO.	PART NUMBER	MAT'L CODE	QTY	ITEM PART NAME NO.	PART NUMBER	MAT'L CODE	QTY
1 * SEAL ASSEMBLY	25271-192		1	25 † CENTER PLATE GASH	ŒT N14145	18010	2
₂ * SPRING CTR WASHER	25273-266		1	26 PIPE PLUG	P06	15079	1
3 SEAL RETAINING RING	S700		1	27 ★ CENTER PLATE GASH	ET N14145	18010	1
4 BEARING CAP	N14130	10010	1	28 ROTOR BLADE SPAC	ER K74031	15030	1
5 BEARING LOCK NUT	S301		1	29 PIPE PLUG	P02	15079	1
6 ★ BEARING CAP GASKET	K74033	18000	1	30 [★] IMPELLER SHAFT	R09454	15010	1
7 TAB WASHER	S302		1	31 * OIL SEAL	25227-230)	1
8 * OUTBOARD BEARING	23282-008		1	32 CONNECTOR	25812-16 ⁻	1	1
9 AIR VENT	S2162		1	33 DOWEL PIN	21133-073	3	2
10 BEARING HOUSING	T02990	11010	1	34 HEX HD CAPSCREW	B0612	15991	8
11 * INBOARD BEARING	23257-012		1	35 LOCKWASHER	J06	15991	8
12 BEARING RET RING	S248		1	36 HEX HD CAPSCREW	B0504	15991	4
13 PIPE PLUG	P02	15079	1	37 LOCKWASHER	J05	15991	4
14 [★] SPACER PLATE GASKET	N14144	18000	1	38 MALE ELBOW	25812-01 ⁻	1	1
15 SPACER PLATE	N14129	11010	1	39 AIR VENT	S2162		1
16 PRESS REG SPRING CAP	K68064	15991	1				
17 * SPRING CAP GASKET	K86067		1	OPTIONAL:			
18 * PRESS REG SPRING	K76301		1	SST IMPELLER SHAF	Γ R09454	17080	1
19 BODY COVER	T03532A	10140	1	TEFLON SEAL ASSY	25271-743	3	1
20 * ROTOR WOODRUFF KEY	K61559	15990	1	 OIL LUBE BEARING 	44143-113	3	1
21 * ROTOR BLADE	K79300-20		6	HOUSING ASSEMBLY			
22 ROTOR BLADE SPACER	K74031	15030	1	-INBOARD BEARING	S310		1
23 GROUP GRIND	LK05296		1	-OUTBOARD BEARIN	IG 23275-008	3	1
24 * LOCATING PIN	21154-666		1	-OIL CUP	26713-05 ⁻	1	1

 * INDICATES PARTS RECOMMENDED FOR STOCK

^{† 2} GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

[•] ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.

S/N 1270031 Up PUMP ISSUE 3

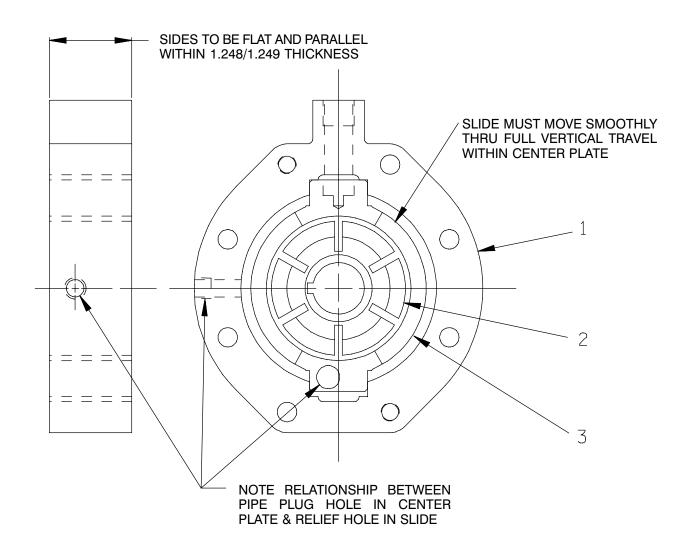

PARTS LIST LK05296 Group Grind

-					
	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
	1	CENTER PLATE	NOT AVAILABLE		1
	2	ROTOR	NOT AVAILABLE		1
	3	SLIDE	NOT AVAILABLE		1

NOTE: THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

В

5 of 5

For U.S. and International Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280 International: +1-419-755-1352

For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870